

INSTRUCTIONS

ECA

FIRST METHOD: REMOTE TO REMOTE METHOD

1. Take the operational remote control of the unit and stand about 2m' from the receiver.
2. Press and hold both the buttons (III) and (I) simultaneously for 5 seconds. If this does not work, please hold buttons (I) and (II) instead.
3. After releasing the buttons of the original remote control, the LED light in the receiver will turn on, indicating that the receiver is ready to learn the new remote control's button.
4. Choose, press and hold the one of the buttons on the NEW remote control for 5 seconds and then release. The LED light will turn off to indicate that the remote control's button has been learned into the receiver's memory.

Notes:

- This service will be available and operational only if the WT jumper in the receiver is OFF.
- To cancel this feature, put on the WT Jumper into the pins in the receiver.
- See the location of this Jumper in the receiver's picture below

SECOND METHOD: TEACHING A NEW REMOTE CONTROL BY THE JUMPER IN THE RECEIVER/MOTOR

1. Remove the jumper (circled in purple) and the LED light will turn on.
2. Choose, press and release the button on the new remote control, which you would like to operate the receiver, for a period of five seconds.
3. Return the jumper to its place.
4. Repeat steps 1-4 for teaching more remote controls.


WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.




PROGRAMMING INSTRUCTIONS

Receiver:

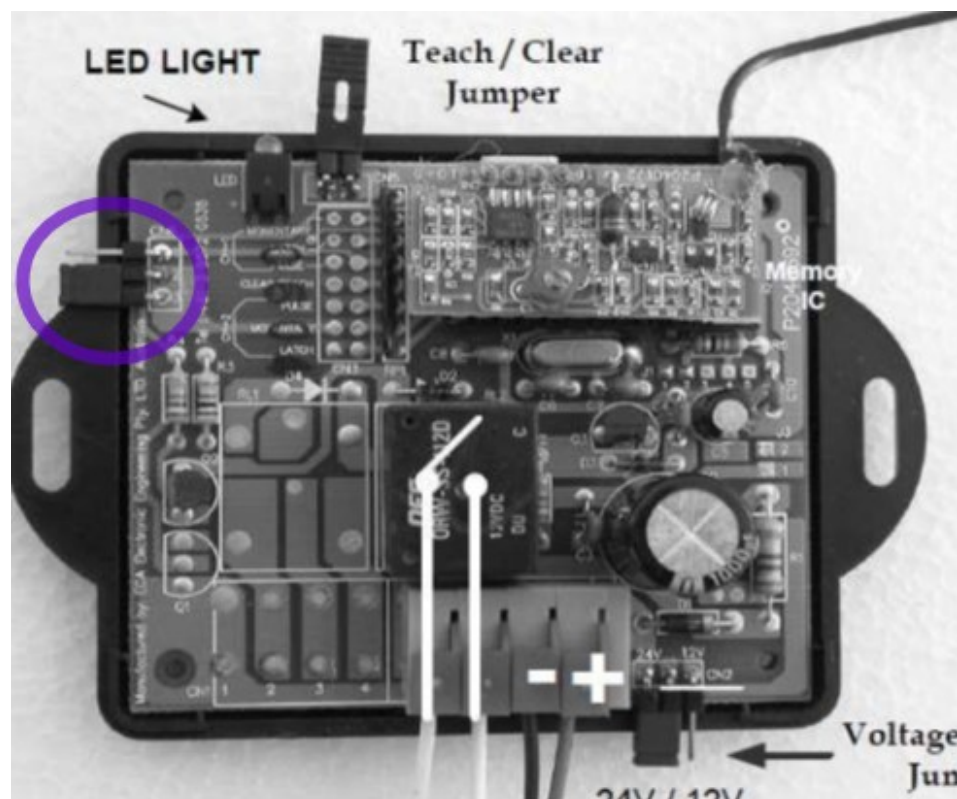

Motor Board:

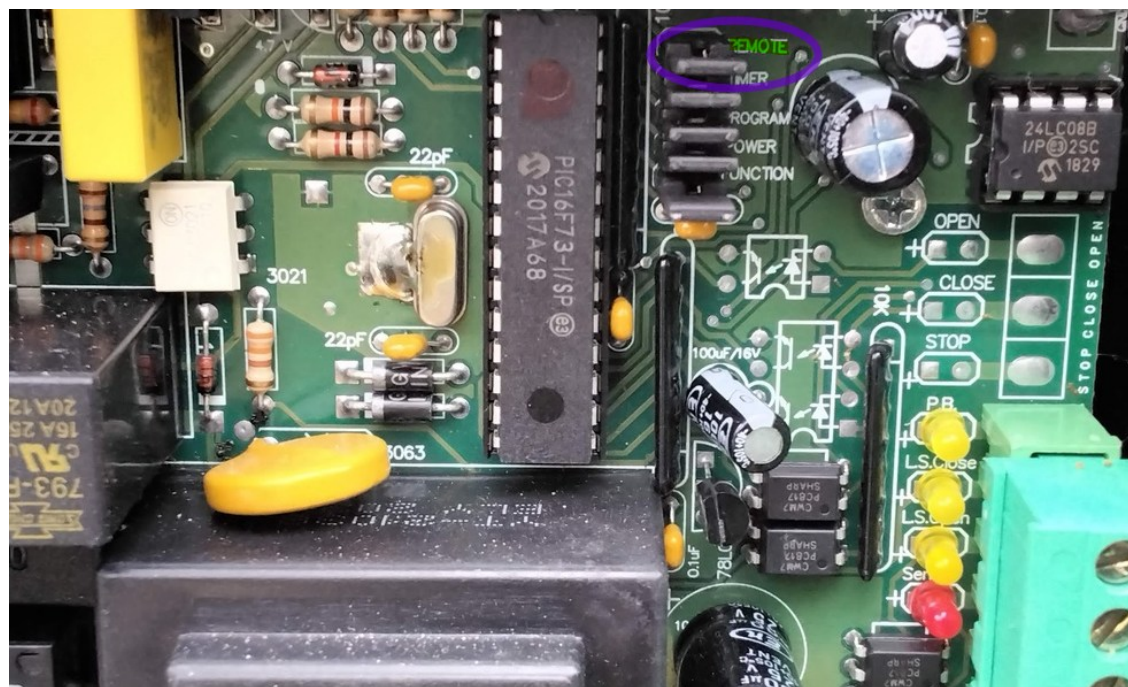

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

